

HisKids.net Wi-Fi Family Radio • WIR-206 Quick Start Guide


For more detailed instructions, please refer to the configuration section beginning on page 7 of the enclosed HisKids.net Wi-Fi Family Radio User Guide.

Before you can use your HisKids.net Wi-Fi Family Radio, you will need a wireless access point connected to your broadband internet, preferably via a router. If your wireless network is configured to use WEP or WPA data encryption, you'll need to know the code so you can get the Radio to communicate with the network. You will also need to know the name of your wireless network, i.e. its ESSID.

The Wi-Fi Family Radio should work in all locations where your wireless network is available. Before you continue, please make sure that your wireless access point is turned on and connected to your broadband internet. To get this part of the system working, you may need to read the instructions supplied with the wireless access point. *Note: If you have a wireless laptop available you can check that the wireless network is up and working.*


Steps for connecting your Wi-Fi Family Radio to a wireless network

1 - Powering on the radio: Plug the cable from the power supply into the socket labeled 7.5V DC on the back of the radio, then press the ON button. The display on the front of the radio will light up and say:

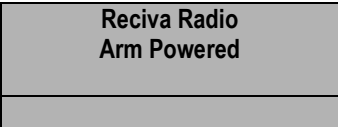

Reciva Radio
Arm Powered

After a few seconds, this will change to show:

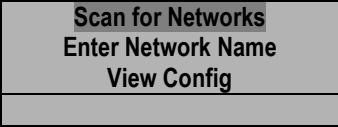

Scan for Networks
Enter Network Name
View Config

2 - Scan for a wireless network connection: When the display says <Scan for Networks>, press the SELECT button. The display will show SCANNING while the Wi-Fi Radio searches for any available networks. If it can't find one, the display will say <No Wireless Networks Found> and you will have to get your wireless access point working (see the instructions supplied with it). It could also be that your access point is out of range, or the ESSID setting is hidden. This is the access point name and can be set up through the config screen of the access point.

When the Wi-Fi Family Radio finds your wireless network, it displays the name (ESSID) of the access point on the screen. It is possible (and in some locations highly likely) that your Radio will find more than one wireless access point, in which case you can choose which one you want to connect to. Turn the dial on the Radio to see the name (ESSID) for each access point found. *Note: You should only connect to access points you own or have permission to use.*

3 - Connect to the wireless network: When the ESSID for the access point you want to connect to is displayed on the screen, press the SELECT button. You might need to enter the correct security access code. After 3 seconds the display automatically goes into code entry mode.

To enter your security code (set up by the person who installed and configured your wireless network), use the dial to select each character of the code in turn, pressing the SELECT button after each character. After the final character, use the dial to select END and press the SELECT button. The display shows <Connecting to Network> as the radio connects, then:



Network OK

IMPORTANT NOTE: PLEASE SEE PAGE 33 OF THE WIR-206 USER GUIDE TO UPGRADE YOUR FIRMWARE BEFORE PROCEEDING. THIS WILL INSURE YOU ARE OPERATING WITH THE LATEST SOFTWARE, MENU AND FEATURES.

NEXT, PRESS ANY PRESET BUTTON TO BEGIN LISTENING. YOU MAY ALSO CHOOSE PROGRAMS FROM THE HISKIDS.NET & PARENTS LISTS DISPLAYED IN YOUR RADIO'S MENU BY PUSHING <BACK> OR <SELECT> AT ANY TIME.